

REMOVAL AND CLEANING OF YOUR POWERHEAD

- 1) Slide the powerhead out of the filter.
- 2) Remove air line and the venturi adapter by pulling away from the powerhead.
- 3) Remove base plate by lining up the flat portion to the locking guide. Pull the base straight away from the powerhead as the impeller may be attached to it.
- 4) Wash all parts under warm tap water. Do not use any detergents. Make sure that the air line is clear of any foreign matter, calcium buildup or salt creep before reassembling.
- 5) Reassemble the powerhead and place it back on your filter.

